

# Installation Guide HV Combi




Combi Outlet + EPS mortar




Outlet is installed like the roof tiles, fixed with clamp




Outlet installed in roof construction.

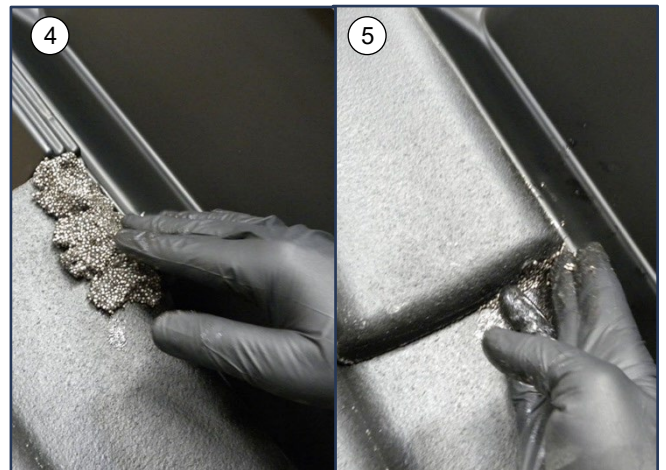

Close gap between the Outlet and the Tiles with EPS mortar

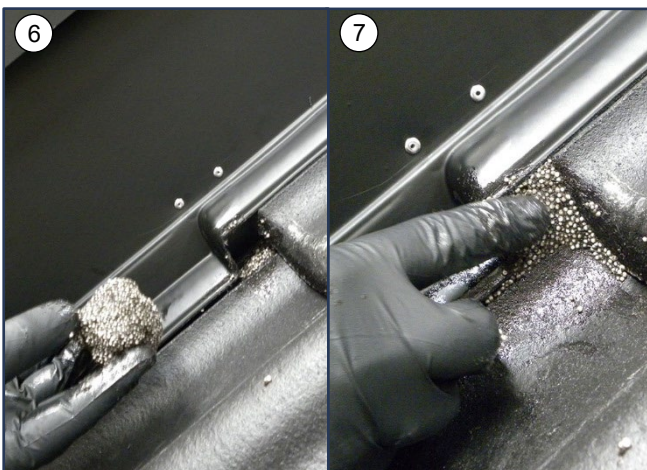

Close the gap on the right side with mortar.

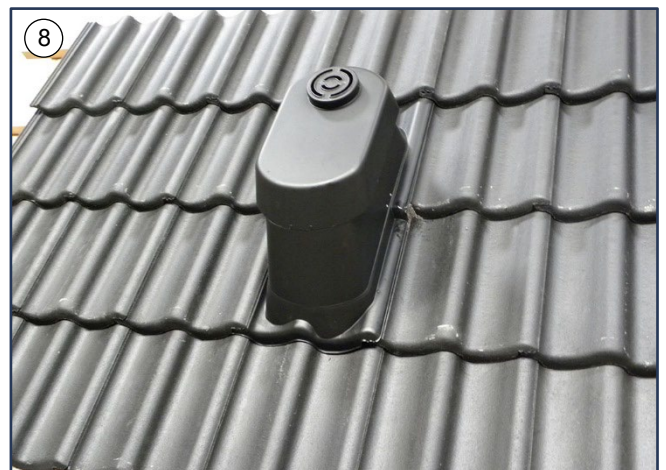

Installation completed.

# Installation Guide

## HV Combi

### Important notice

- 1) The Outlet is manufactured in HIPS
- 2) Surface treated with UV stabilized acrylic paint
- 3) Suitable for pitched roofs from 22 – 55 °
- 4) Remove plastic bag before placing in direct sunlight
- 5) It is recommended to place the Outlet close to the ridge  
– approximately 1 meter below the Ridge.
- 6) If installed more than 1 meter below the Ridge, it is recommended to install a snow protection system above the Outlet in (only in areas with occasional snowfall)
- 7) The Outlet must in any situation be installed according to local legislation

This information is based on our current available knowledge and shall not constitute a guarantee for any specific product features nor establish a legally valid contractual relationship.